

Useful Code Blocks

Click the letters to change them to A, B, C or D. HI is the same as on. LO is the same as off.

In this program the buzzer is connected to A. The buzzer is turned on and off four times.

Wiring

Batteries must be switched on

Buzzer can be connected to A, B, C or D

To Computer USB

More Information

The part that buzzes on a buzzer is called a piezo. It makes the noise when electricity stretches or compresses the piezoceramic material. Our buzzers are setup for a set voltage of electricity which is why they only make one tone.

Where else can you find piezo buzzers?

Crumble Playground Buzzer

MC24

