



## **Useful Code Blocks**

Some motors can trip a temporary fuse if they are suddenly switched from full power forward to full power in reverse.

Start your motor at 50% power and adjust upwards you can test if there is anything in the program that trips the Crumble temporary fuse at higher power settings.

You can manually reverse the direction of the motor by swapping the negative and positive connections on the motor.



